

Pipe Fittings

POF



Plug

Model (T)	
Thread(R)	Thread(NPT)
POF G01	POF N01
POF G02	POF N02
POF G03	POF N03
POF G04	POF N04
POF G06	POF N06
POF G08	POF N08

PEL



Equal Male Stud Elbow

Model (D-T)	
Thread(R)	Thread(NPT)
PEL 01	PEL 01N01
PEL 02	PEL 02N02
PEL 03	PEL 03N03
PEL 04	PEL 04N04
PEL 06	PEL 06N06
PEL 08	PEL 08N08

PSMF



Straight Male to Female

Thread(R)T1-Thread(R)T2		Model (D T1-D T2)		Thread(G)T1-Thread(G)T2	
Thread(R)T1	Thread(R)T2	Thread(NPT)T1	Thread(NPT)T2	Thread(G)T1	Thread(G)T2
PSMF 01-01	PSMF 06-06	PSMF N01-N01	PSMF N06-N06	PSMF G01-G01	PSMF G06-G06
PSMF 02-02	PSMF 06-04	PSMF N02-N02	PSMF N06-N04	PSMF G02-G02	PSMF G06-G04
PSMF 02-01	PSMF 06-03	PSMF N02-N01	PSMF N06-N03	PSMF G02-G01	PSMF G06-G03
PSMF 03-03	PSMF 06-02	PSMF N03-N03	PSMF N06-N02	PSMF G03-G03	PSMF G06-G02
PSMF 03-02	PSMF 08-08	PSMF N03-N02	PSMF N08-N08	PSMF G03-G02	PSMF G08-G08
PSMF 03-01	PSMF 08-06	PSMF N03-N01	PSMF N08-N06	PSMF G03-G01	PSMF G08-G06
PSMF 04-04	PSMF 08-04	PSMF N04-N04	PSMF N08-N04	PSMF G04-G04	PSMF G08-G04
PSMF 04-03	PSMF 08-03	PSMF N04-N03	PSMF N08-N03	PSMF G04-G03	PSMF G08-G03
PSMF 04-02		PSMF N04-N02		PSMF G04-G02	
PSMF 04-01		PSMF N04-N01		PSMF G04-G01	

PFL



Equal Female Stud Elbow

Model (T)	
Thread(R)	Thread(NPT)
PFL 01	PFL N01
PFL 02	PFL N02
PFL 03	PFL N03
PFL 04	PFL N04
PFL 06	PFL N06
PFL 08	PFL N08

PRMF



Reduce Male to Female

Model (D T1-D T2)		
Thread(R)T1-T2	Thread(NPT)T1-T2	Thread(G)T1-T2
PRMF 02-01	PRMF N02-N01	PRMF G02-G01
PRMF 03-01	PRMF N03-N01	PRMF G03-G01
PRMF 03-02	PRMF N03-N02	PRMF G03-G02
PRMF 04-01	PRMF N04-N01	PRMF G04-G01
PRMF 04-02	PRMF N04-N02	PRMF G04-G02
PRMF 04-03	PRMF N04-N03	PRMF G04-G03
PRMF 06-02	PRMF N06-N02	PRMF G06-G02
PRMF 06-03	PRMF N06-N03	PRMF G06-G03
PRMF 06-04	PRMF N06-N04	PRMF G06-G04

PEFL



Equal Female Male Elbow

Model (T)	
Thread(R)	Thread(NPT)
PEFL 01	PEFL N01
PEFL 02	PEFL N02
PEFL 03	PEFL N03
PEFL 04	PEFL N04
PEFL 06	PEFL N06
PEFL 08	PEFL N08

PO



PLUG

Model (T)		
Thread(R)	Thread(NPT)	Thread(G)
PO M5	PO N01	PO G01
PO 01	PO N02	PO G02
PO 02	PO N03	PO G03
PO 03	PO N04	PO G04
PO 04	PO N06	PO G06
PO 06	PO N08	PO G08
PO 08		

POHH



PLUG

Model (T)		
Thread(R)	Thread(NPT)	Thread(G)
POHH M5	POHH N01	POHH G01
POHH 01	POHH N02	POHH G02
POHH 02	POHH N03	POHH G03
POHH 03	POHH N04	POHH G04
POHH 04	POHH N06	POHH G06
POHH 06	POHH N08	POHH G08
POHH 08		

POH



PLUG

Model (T)		
Thread(R)	Thread(NPT)	Thread(G)
POH M5	POH N01	POH G01
POH 01	POH N02	POH G02
POH 02	POH N03	POH G03
POH 03	POH N04	POH G04
POH 04	POH N06	POH G06
POH 06	POH N08	POH G08
POH 08		

Pipe Fittings

PZ



In & Out Thread

Model ($\varnothing$ T1 - $\varnothing$ T2)		
Thread(R)T1-G1T2	Thread(NPT)T1-T2	Thread(G)T1-T2
PZ 02-G01	PZ N02-N01	PZ G02-G01
PZ 03-G01	PZ N03-N01	PZ G03-G01
PZ 03-G02	PZ N03-N02	PZ G03-G02
PZ 04-G01	PZ N04-N01	PZ G04-G01
PZ 04-G02	PZ N04-N02	PZ G04-G02
PZ 04-G03	PZ N04-N03	PZ G04-G03
PZ 06-G02	PZ N06-N02	PZ G06-G02
PZ 06-G03	PZ N06-N03	PZ G06-G03
PZ 06-G04	PZ N06-N04	PZ G06-G04

PMT



Male Stud Branch Tee

Model (T)	
Thread(G)	Thread(NPT)
PMT 01	PMT N01
PMT 02	PMT N02
PMT 03	PMT N03
PMT 04	PMT N04
PMT 06	PMT N06
PMT 08	PMT N08

PSMT



Male Tee

Model (T)	
Thread(R)	Thread(NPT)
PSMT 01	PSMT N01
PSMT 02	PSMT N02
PSMT 03	PSMT N03
PSMT 04	PSMT N04
PSMT 06	PSMT N06
PSMT 08	PSMT N08

PSFT



Male To Female Tee

Model (T)	
Thread(R)	Thread(NPT)
PSFT 01	PSFT N01
PSFT 02	PSFT N02
PSFT 03	PSFT N03
PSFT 04	PSFT N04
PSFT 06	PSFT N06
PSFT 08	PSFT N08

PFT



Equal Female Tee

Model (T)	
Thread(R)	Thread(NPT)
PFT 01	PFT N01
PFT 02	PFT N02
PFT 03	PFT N03
PFT 04	PFT N04
PFT 06	PFT N06
PFT 08	PFT N08

PMST



Male Run Tee

Model (T)	
Thread(R)	Thread(NPT)
PMST 01	PMST N01
PMST 02	PMST N02
PMST 03	PMST N03
PMST 04	PMST N04
PMST 06	PMST N06
PMST 08	PMST N08

PMMT



Double Male to Female

Model (T)	
Thread(R)	Thread(NPT)
PMMT 01	PMMT N01
PMMT 02	PMMT N02
PMMT 03	PMMT N03
PMMT 04	PMMT N04
PMMT 06	PMMT N06
PMMT 08	PMMT N08

PYF



Female Y

Model (T)	
Thread(R)	Thread(NPT)
PYF 01	PYF N01
PYF 02	PYF N02
PYF 03	PYF N03
PYF 04	PYF N04

PHTM



Male Barb

Model ($\varnothing$ D - $\varnothing$ T)					
Tube(Metric)-Thread(R)		Tube(Metric)-Thread(G)		Tube(Metric)-Thread(NPT)	
PHTM05-01	PHTM10-02	PHTM05-G01	PHTM10-G02	PHTM05-N01	PHTM10-N02
PHTM05-02	PHTM10-03	PHTM05-G02	PHTM10-G03	PHTM05-N02	PHTM10-N03
PHTM07-01	PHTM12-02	PHTM07-G01	PHTM12-G02	PHTM07-N01	PHTM12-N02
PHTM07-02	PHTM12-03	PHTM07-G02	PHTM12-G03	PHTM07-N02	PHTM12-N03
PHTM08-01	PHTM12-04	PHTM08-G01	PHTM12-G04	PHTM08-N01	PHTM12-N04
PHTM08-02	PHTM17-03	PHTM08-G02	PHTM17-G03	PHTM08-N02	PHTM17-N03
PHTM09-01	PHTM17-04	PHTM09-G01	PHTM17-G04	PHTM09-N01	PHTM17-N04
PHTM09-02	PHTM18-03	PHTM09-G02	PHTM18-G03	PHTM09-N02	PHTM18-N03
PHTM09-03	PHTM18-04	PHTM09-G03	PHTM18-G04	PHTM09-N03	PHTM18-N04
PHTM10-01		PHTM10-G01		PHTM10-N01	

Pipe Fittings

PHTF



Tube(Metric)-Thread(R)		Model (D - D - T)		Tube(Metric)-Thread(NPT)	
Thread(R)	Thread(NPT)	Thread(G)	Thread(NPT)	Thread(G)	Thread(NPT)
PHTF05-01	PHTF10-02	PHTF05-G01	PHTF10-G02	PHTF05-N01	PHTF10-N02
PHTF05-02	PHTF10-03	PHTF05-G02	PHTF10-G03	PHTF05-N02	PHTF10-N03
PHTF07-01	PHTF12-02	PHTF07-G01	PHTF12-G02	PHTF07-N01	PHTF12-N02
PHTF07-02	PHTF12-03	PHTF07-G02	PHTF12-G03	PHTF07-N02	PHTF12-N03
PHTF08-01	PHTF12-04	PHTF08-G01	PHTF12-G04	PHTF08-N01	PHTF12-N04
PHTF08-02	PHTF17-03	PHTF08-G02	PHTF17-G03	PHTF08-N02	PHTF17-N03
PHTF09-01	PHTF17-04	PHTF09-G01	PHTF17-G04	PHTF09-N01	PHTF17-N04
PHTF09-02	PHTF18-03	PHTF09-G02	PHTF18-G03	PHTF09-N02	PHTF18-N03
PHTF09-03	PHTF18-04	PHTF09-G03	PHTF18-G04	PHTF09-N03	PHTF18-N04
PHTF10-01		PHTF10-G01		PHTF10-N01	

PLB



Tube(Metric)-Thread(R)		Model (D - D - T)		Tube(Metric)-Thread(NPT)	
Thread(R)	Thread(NPT)	Thread(G)	Thread(NPT)	Thread(G)	Thread(NPT)
PLB05-01	PLB10-02	PLB05-G01	PLB10-G02	PLB05-N01	PLB10-N02
PLB05-02	PLB10-03	PLB05-G02	PLB10-G03	PLB05-N02	PLB10-N03
PLB07-01	PLB12-02	PLB07-G01	PLB12-G02	PLB07-N01	PLB12-N02
PLB07-02	PLB12-03	PLB07-G02	PLB12-G03	PLB07-N02	PLB12-N03
PLB08-01	PLB12-04	PLB08-G01	PLB12-G04	PLB08-N01	PLB12-N04
PLB08-02	PLB17-03	PLB08-G02	PLB17-G03	PLB08-N02	PLB17-N03
PLB09-01	PLB17-04	PLB09-G01	PLB17-G04	PLB09-N01	PLB17-N04
PLB09-02	PLB18-03	PLB09-G02	PLB18-G03	PLB09-N02	PLB18-N03
PLB09-03	PLB18-04	PLB09-G03	PLB18-G04	PLB09-N03	PLB18-N04
PLB10-01		PLB10-G01		PLB10-N01	

PYT



Model (D - D - T)	
Thread(R)	Thread(NPT)
PYT 01	PYT N01
PYT 02	PYT N02
PYT 03	PYT N03
PYT 04	PYT N04

PMFM



Model (D - D - T)	
Thread(G)	Thread(NPT)
PMFM G01	PMFM N01
PMFM G02	PMFM N02
PMFM G03	PMFM N03
PMFM G04	PMFM N04

PFC




Model (T)	
Thread(R)	Thread(NPT)
PFC G01	PFC N01
PFC G02	PFC N02
PFC G03	PFC N03
PFC G04	PFC N04

PBB



Model (D - D)	
Tube	
PBB 05	
PBB 07	
PBB 08	
PBB 09	
PBB 10	
PBB 12	
PBB 17	
PBB 18	

PFCT

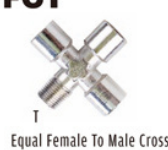

Model (T)	
Thread(R)	Thread(NPT)
PFCT 01	PFCT N01
PFCT 02	PFCT N02
PFCT 03	PFCT N03
PFCT 04	PFCT N04

PTB



Model (D - D)	
Tube	
PTB 05	
PTB 07	
PTB 08	
PTB 09	
PTB 10	
PTB 12	
PTB 17	
PTB 18	

Quick Coupler

SH



Model	Size
SH-20	5/16" Tube
SH-30	3/8" Tube
SH-40	1/2" Tube

SF



Model	Size
SF-20	1/4 PT
SF-30	3/8 PT
SF-40	1/2 PT

SM



Model	Size
SM-20	1/4 PT
SM-30	3/8 PT
SM-40	1/2 PT

SP



Model	Size
SP-20	5/16" Tube
SP-30	3/8" Tube
SP-40	1/2" Tube

PH



Model	Size
PH-20	5/16" Tube
PH-30	3/8" Tube
PH-40	1/2" Tube

PF



Model	Size
PF-20	1/4 PT
PF-30	3/8 PT
PF-40	1/2 PT

PM



Model	Size
PM-20	1/4 PT
PM-30	3/8 PT
PM-40	1/2 PT

PP



Model	Size
PP-20	5/16" Tube
PP-30	3/8" Tube
PP-40	1/2" Tube

Multipass Quick Coupler

SML



SMT



SMM



SMX



SMV



SMY



SML-A



SMT-A



SMM-A

